



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)


## FITTING INSTRUCTIONS FIT954

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


**FORD RANGER PX 2015+**

**P/N BG556**

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 3 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Remove 3 plastic fasteners.
4. Fit Bonnet Guard in position, and fasten securely with supplied screw.  
Note sequence as per diagram as below.

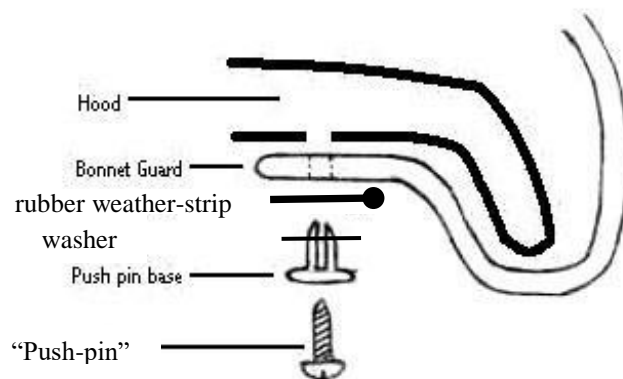

5. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

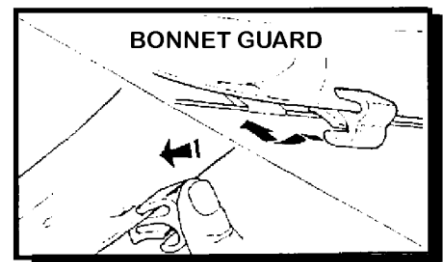

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD**

